



## DMX MODE

Channel	Function	Instruction
<b>8CH MODE</b>		
CH1	Total Dimmer	R、G、B、W Total Dimmer-Linear Dimmer. Dark to Bright
CH2	Total Strobe	R、G、B、W Total Flash Strobe. Slow to Fast
CH3	Function Choice	0~50: DMX 8CH Control. 51~100: 7Colors Jump Change. 101~150: 7Colors Gradate. 151~200: 7Colors Pulse Change. 201—255 NC.
CH4	Function/Speed	Function/Speed. Slow to Fast
CH5	R Dimmer	R Dimmer-Linear Dimmer. Dark to Bright
CH6	G Dimmer	G Dimmer-Linear Dimmer. Dark to Bright
CH7	B Dimmer	B Dimmer-Linear Dimmer. Dark to Bright
CH8	W Dimmer	WDimmer-Linear Dimmer. Dark to Bright
<b>4CH MODE</b>		
CH1	R Dimmer	R Dimmer-Linear Dimmer. Dark to Bright
CH2	G Dimmer	G Dimmer-Linear Dimmer. Dark to Bright
CH3	B Dimmer	B Dimmer-Linear Dimmer. Dark to Bright
CH4	W Dimmer	WDimmer-Linear Dimmer. Dark to Bright

### Technical:

Voltage: AC90-220V 50/60HZ

Power : 180W

Light Source: 18pcs\*10w RGBW LED

Operation: DMX512, Auto, Sound, Master-slave



AdkinsProLighting.com

# COLOR BAR HEX

18W RGBAW+UV LEDs



## User's Manual

(330) 436-3260 Fax: (330) 436-3283

E-mail: [support@adkinsprolighting.com](mailto:support@adkinsprolighting.com)

[www.adkinsprolighting.com](http://www.adkinsprolighting.com)



## INSTRUCTION

Thank you for using our company's products. For your own safety, please read this user manual carefully before installing the device. This manual covers the important information of installing and using. Please install and operate following the manual.

**CAUTION**

Please read this instruction carefully before installation:

1. Inspect the device carefully before installation.
2. Do not get wet. Indoor use only.
3. To guarantee the lifespan of product, please keep in dry and cool.
4. Disconnect the power before installation or removing.

 
**MAINTAIN**

1. The lamps should be kept dry to avoid working in wet environments
2. Intermittent use would effectively extend the lamp life.
3. Do not use alcohol and other organic solvents to clean the housing, so as to avoid injury.

**SPECIFICATION**

**Voltage:** AC100~240V/50~60Hz  
**Light-Source:** 10W RGBW LED-18pcs  
**Channels:** 4CH/8CH DMX  
**Power Consumption:** 180W  
**Control Mode:** Master-Slave. Auto Running. DMX512

**KEYS INSTRUCTION**



1~Press MENU to select from 11 different functions. The front 2Digits mean the function it has. (Please see the function form as follow.) And the last 2Digits mean the function's Value, speed or parameter. Press UP or DOWN can change the value. And press ENTER to confirm.

2~Press MENU more than 2sec. The 2Digit number will flash. Then press UP or DOWN can change the value quickly. Then press the ENTER to save the value you want. If you don't want to save the value, press MENU more than 2sec. is okay.

**FUNCTION FORM**

No	Show	Function Instruction
----	------	----------------------

1	<b>D001</b>	<b>8ch mode DMX Address (001—512)</b> UP、DOWN increase or reduce the value
2	<b>A001</b>	<b>4ch mode DMX Address (001—512)</b> UP、DOWN increase or reduce the value
3	<b>CC01</b>	<b>7Colors Jump Change (01—99)</b> UP、DOWN Change the speed
4	<b>CP01</b>	<b>7Colors Gradate (01—99)</b> UP、DOWN Change the speed
5	<b>DE01</b>	<b>7Colors Pulse Change (01—99)</b> UP、DOWN Change the speed
6	<b>FH01</b>	<b>Strobe flash (01—99)</b> UP、DOWN Change the speed
7	<b>R255</b>	<b>Red (000—255)</b> UP、DOWN Change brightness
8	<b>G255</b>	<b>Green (000—255)</b> UP、DOWN Change brightness
9	<b>B255</b>	<b>Blue (000—255)</b> UP、DOWN Change brightness
10	<b>O255</b>	<b>White (000—255)</b> UP、DOWN Change brightness